



# **Mini Magic™ Hot Brush**

**SKU: YLB01**

**Safety Guide / Guide de Sécurité**

**Operating Instructions**

**WARNING: THIS PRODUCT IS NOT A TOY. KEEP OUT OF REACH OF CHILDREN AT ALL TIMES. THIS PRODUCT REACHES HIGH TEMPERATURES AND SHOULD ONLY BE PLACED ON HEAT RESISTANT, COLOR PROOF SURFACES WHILE HOT AND IN USE. UNPLUG WHEN NOT IN USE.**

## **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS  
BEFORE USING  
*KEEP AWAY FROM WATER***

**DANGER** – Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping or drowsy.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
10. Do not place the heated unit directly on any surface while it is hot or plugged in.
11. Do not use an extension cord with this appliance.
12. TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT BRUSH MORE THAN TWO TIMES.
13. Do not operate with a voltage converter.

**AVERTISSEMENT: CET APPAREIL N'EST PAS UN JOUET. CET APPAREIL ATTEINT DES TEMPÉRATURES ET DEVRAIT SEULEMENT ÊTRE PLACÉ SUR DES SURFACES ANTI-CALORIQUE, D'ÉPREUVE COULEUR TANDIS QUE CHAUD ET EN SERVICE. DÉBRANCHEZ SI NON UTILISABLE.**

## **CONSIGNES IMPORTANTES DE SÉCURITÉ**

Lorsque vous utilisez des appareils électriques, particulièrement en la présence d'enfants, veillez à toujours prendre quelques précautions élémentaires dont les suivantes :

**LIRE LE MODE D'EMPLOI  
AVANT D'UTILISER  
L'APPAREIL TENIR LOIN DE L'EAU**

**DANGER** – Tout appareil électrique demeure sous tension même si le contact est coupé. Pour réduire les risques de décès par décharge électrique :

1. Débranchez toujours l'appareil immédiatement après l'avoir utilisé.
2. N'utilisez pas l'appareil en prenant un bain.
3. Ne mettez pas ou ne rangez pas l'appareil dans un endroit où il pourrait tomber dans une baignoire ou un évier ou à partir desquels il pourrait être accessible.
4. Ne le mettez pas ou ne l'échappez pas dans l'eau ou dans un autre liquide.
5. Si un appareil tombe dans l'eau, débranchez-le immédiatement; ne le saisissez pas.

**AVERTISSEMENT** – Pour réduire les risques de brûlure, de feu, de décharge électrique ou de blessure :

1. Ne laissez jamais l'appareil sans surveillance s'il est branché.
2. Ne tirez pas sur le cordon, ne le vrillez pas et ne l'enroulez pas autour de l'appareil.
3. Cet appareil ne doit pas être utilisé par ou pour des enfants ou des personnes ayant certaines incapacités, ou à proximité d'eux.
4. N'utilisez cet appareil que pour l'usage pour lequel il a été conçu, tel que le décrit le présent manuel. N'utilisez pas d'accessoires non recommandés par le fabricant.
5. N'utilisez jamais cet appareil si le cordon ou la fiche est endommagé, s'il ne fonctionne pas bien, s'il a été échappé par terre ou endommagé ou s'il est tombé dans l'eau. Retournez l'appareil à un centre de service autorisé en vue d'un examen ou d'une réparation.
6. Maintenez le cordon loin des surfaces chaudes.
7. N'utilisez jamais l'appareil pendant le sommeil ou si vous êtes en état de somnolence.
8. N'utilisez pas l'appareil à l'extérieur ou là où l'on utilise des aérosols (vaporisateurs) ou administre de l'oxygène.
9. L'appareil est chaud lorsqu'il fonctionne. Faites en sorte que les surfaces chaudes ne touchent pas vos yeux ou votre peau.

10. Ne posez pas l'appareil chaud directement sur une surface pendant qu'il chauffe ou qu'il est branché.
11. N'utilisez pas une rallonge avec cet appareil.
12. POUR ÉVITER QUE LES CHEVEUX NE S'EMMÊLENT, N'ENROULEZ JAMAIS UNE MÈCHE PLUS DE DEUX FOIS AUTOUR DE LA BROSSE CHAUDE.
13. Ne l'utilisez pas avec un convertisseur de tension.

## **SAVE THESE INSTRUCTIONS**

## **OPERATING INSTRUCTIONS**

### **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Use on Alternating Current (50-60 Hz) only. This unit is designed to be operated worldwide at 120-240V AC.

### **GET TO KNOW YOUR MINI HOT BRUSH**

This mini hot brush is perfect for everyday, hair straightening, damp-to-dry styling and touch-ups.

#### **Compact size**

- Easy to carry
- Perfect for travel

#### **Silicone bristles**

- Soft and gentle feeling

- Massaging and heat protection
- Silicone bristles are replaceable if damaged

### **Advanced PTC heating technology**

- Delivers nice warm feeling
- For all hair types, wet and dry

### **USE YOUR MINI HOT BRUSH**

1. Before plugging in check that the voltage on the rating label corresponds to the local mains voltage.
2. Pre-heat your mini hot brush. Turn on the power by moving the power switch to ON position, then the indicator light LED will be brighten.
3. Section hair into strands of approximately 2 inches wide. Comb through, starting at the ends and work upward to smooth and detangle.
4. Next, apply the mini hot brush to the hair roots and slide it right to the end of the hair. Distributing heat evenly with slow, steady strokes to add shine.
5. Repeat until you finish all your sections.

### **STYLING TIPS**

1. Always wash and condition your hair before styling.
2. Partially dry hair before styling.
3. For long lasting results, comb a small amount of mousse or styling gel through the hair before drying and styling.
4. When sectioning off your hair for styling, you may choose to use butterfly or hair clips to make sectioning easier.
5. Use small sections of hair when styling.
6. Start at the back of the head and work forwards to the sides and front.
7. While the mini hot brush is heating never leave unattended.
8. After use unplug and allow the mini hot brush to cool completely before cleaning or storing.

## **USER MAINTENANCE**

Your mini hot brush is virtually maintenance free. No lubrication or other care is needed.

If cleaning becomes necessary, first ensure the mini hot brush is unplugged and cool then use a slightly damp cloth to clean, then wipe completely dry with a dry cloth. No other cleaning is necessary.

**WARNING:** Do not immerse in water.

If any abnormal condition occurs, unplug the mini hot brush, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

## **STORAGE**

When not in use, disconnect the appliance and allow it to cool completely, and store it in a safe, dry location where it will not become damaged, and ensure it is out of reach from children.

Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

## **LIMITED TWO-YEAR WARRANTY**

This product is guaranteed against defects in material and workmanship for a period of 24 months from the date of original purchase.

Should this product become defective during the guarantee period, Yeelite will repair or replace (at our option) your unit free of charge.

To obtain service under this warranty, return the defective product to the company address listed below, together with your purchase receipt and \$8.00

as the shipping and handling fee. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL YEELITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province, state to state.

---

Yeelite Inc.  
53 Goulding Cres.  
Kanata, ON K2K 2N9  
Canada  
Visit our web site: [www.yeelite.com](http://www.yeelite.com)  
Email: [info@yeelite.com](mailto:info@yeelite.com)



**20170002 Rev. A**

© Copyright 2017, Yeelite Inc. All rights reserved.  
Printed in China